

THE SOMERSET PLANTER | WEATHERED WALLSTONE

PROJECT SUMMARY



65
STONES

STONES REQUIRED:

65 stones required to complete this project

BLOCK SIZE:

12-L x 8-W x 4-H in (approx.)
305-L x 203-W x 102-H mm








INSTALLATION GUIDELINES:

Suggested tools: Safety glasses, gloves, tape measure, level, rubber mallet, shovel, wheelbarrow, hand tamper (or plate compactor), and class A gravel.

Base Preparation. Dig an area that is 6" larger on all sides than your project and at least 8" deep. Compact class 'A' gravel in the area 2" at a time and fill to a depth of 6" to withstand weight of project and resist seasonal frost from below.

The First Row. Lay the first level of blocks on the compacted gravel base, making sure the stones are level from side to side and front to back. Bury half of the base block.

Additional Rows. Stack additional rows by staggering the stones throughout your project as per the diagram to your desired height. Apply adhesive on each course to adhere the stones. See reverse for further instructions.

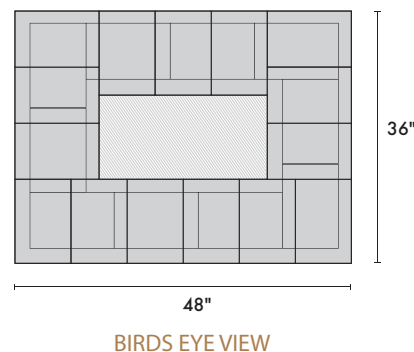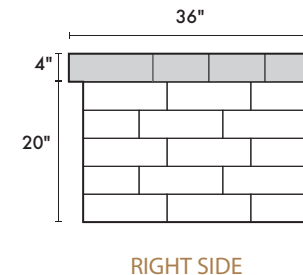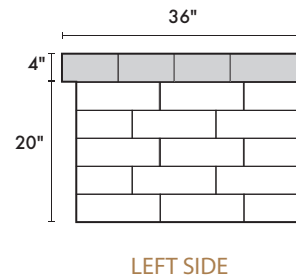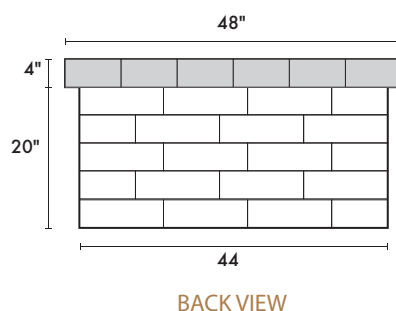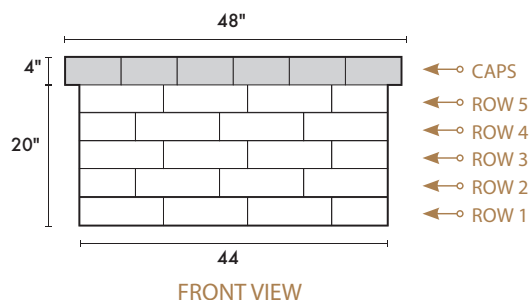

STONES REQUIRED:

Wall Rows 1 -5:

- Row 1 = 14 stones
- Row 2 = 14 stones
- Row 3 = 10 stones
- Row 4 = 10 stones
- Row 5 = 10 stones

Decorative Wall Face:

- Row 1 = 9 stones

Caps

- Row 1 = 21 stones

SEE REVERSE FOR ROW
BY ROW INSTRUCTIONS



Natural Charcoal

Autumn Blend

Chamois Charcoal


Mocha Charcoal

STEP 1 - ROWS 1 THROUGH 5:

Start installing your first row of blocks by placing your first stone down onto your compacted base approximately 6" away from the sides of your base. Make sure the block is level from side to side and front to back. Continue with your next block being sure to follow the first pattern on this sheet for stone placement. Install additional stones so they are flush to each other with no gaps. All stones in the first row need to be levelled from side to side and front to back.


The second row of blocks needs to be staggered vertically from the first row. This will increase the stability of your project. The second row is installed in the same manner as the first just follow the second pattern on this sheet for stone placement. Each row must be adhered to the next so that your project will remain stable if it is bumped or jostled. Rows 3 to 5 are installed by alternating between pattern one and pattern two on this sheet for stone placement.

ROWS 1, 3 & 5

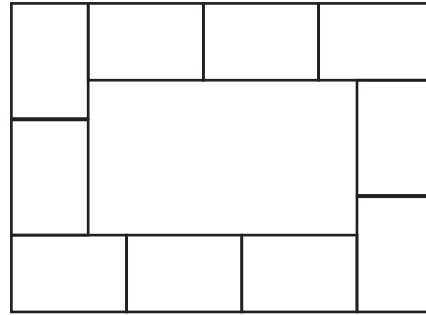

BIRD'S EYE VIEW

ROWS 2 & 4

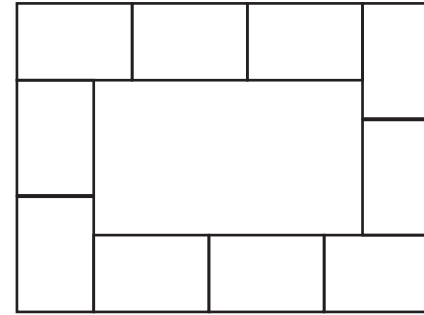


BIRD'S EYE VIEW

STEP 2 - CAPS

The caps should be installed with 2 inches of the each stone end extending over the edge of regular planter rows. This will define the cap portion of your planter giving increased good looks. Follow the third pattern on this sheet for stone placement.

CAPS

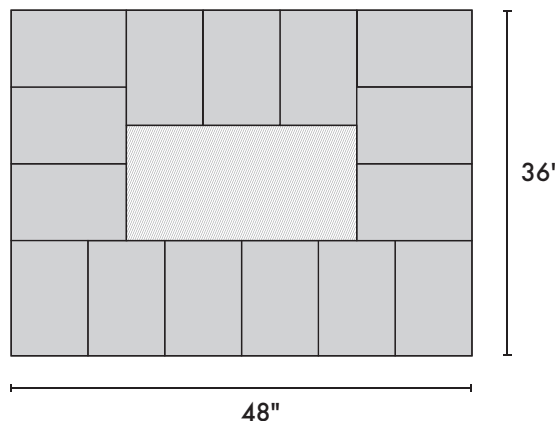

BIRD'S EYE VIEW