

Patio Stones Installation

SUPPLIES

- Chisel
- Mallet
- Level
- Shovel
- Stakes & String
- Sand
- Patio Edge Restraint
- Safety Glasses/ Gloves
- Tamper
- Broom
- Granular "A" Crushed Stone

Patio Stones are easy to install for patios, pool surrounds and walkways.

Step 1

Mark the proposed area for excavation. In general excavate the area to an approximate depth of 4"-6".

Step 2

Fill excavated area with approximately 4" of granular "A" crushed stone.

Step 3

Compact crushed stone with a vibrating plate tamper. This will provide a firm base and allow water to drain.


Step 4

In clay soils we strongly recommend using a geotextile material to keep soil and gravel apart. This will provide improved drainage and yield greater, long term stability. Complete the base by adding 1" of bedding sand to achieve a smooth working area. Try to achieve a 2" slope approximately every 10 feet away from the foundation to assist with water drainage.

Step 5

Lay 1 to 2 rows of Patio Stones. Check the grade with a level to ensure proper drainage. Continue laying Patio Stones in the desired pattern.

Cross Section

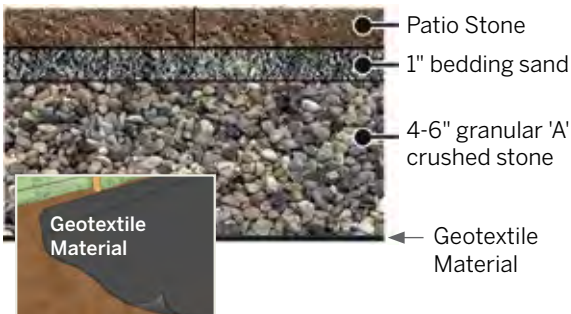

Note: Patio Stones are recommended for pedestrian traffic only.